

# Installation Instruction

## Install Pack Includes

---


Expansion Bolts & sets M10\*90 mm



### INSTALLATION

Ensure the bracket is fixed securely to **SOLID BASE** of the wall to hold the load.

STEP 1: Fix the back bar to the wall with expansion bolts.  
Note: A liquid level is equipped.

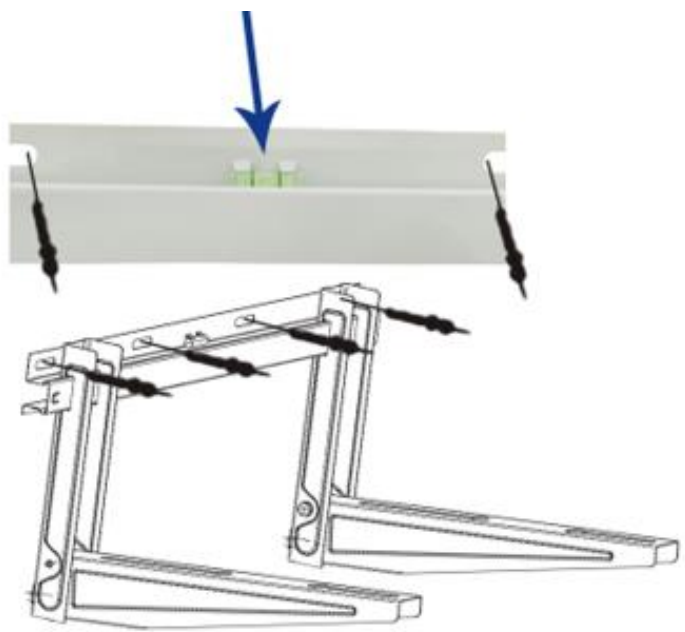


STEP 2: Unfold the brackets, mount to the back bar, adjust the space of the arms to fit the A/C unit.



STEP 3: Fix A/C unit to bracket with hexagonal bolts.  
NB: Tighten the hexagonal bolts on the bracket



### SPECIFICATION

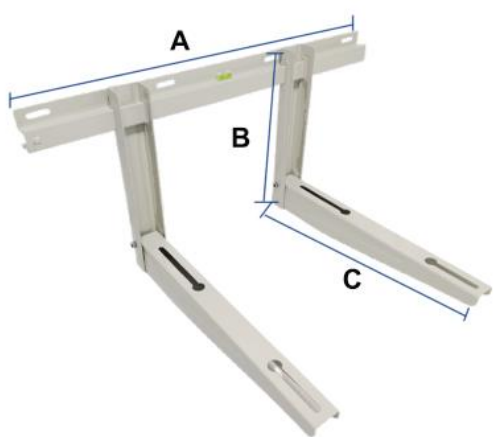

	A(mm)	B(mm)	C(mm)
HBF-450	700	300	450
HBF-480	800	380	480
HBF-550	800	380	550