Installation Instruction

Install Pack Includes

Expansion Bolts & sets M10*90 mm

INSTALLATION

Ensure the bracket is fixed securely to SOLID BASE of the wall to hold the load.

STEP 1: Fix the back bar to the wall with expansion bolts.

STEP 2: Insert the vertical bar into the bottom bar, mount to the back bar, adjust the space of the arms to fit the A/C unit.

STEP 3: Additional expansion bolts to fix the vertical bar holding the heavy side of the A/C unit is optional.

STEP 4: Fix A/C unit to bracket with hexagonal bolts.
NB: Tighten the hexagonal bolts on the bracket

SPECIFICATION

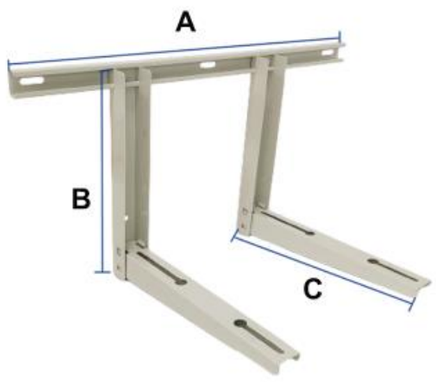

	A(mm)	B(mm)	C(mm)
HB-480	800	420	480
HB-550	900	420	550
HB-600	900	420	600
HB-700	800	420	700